 
 


Only use the mains power adaptors, cables and rechargeable batteries supplied in this box, or this product may not work. Any replacement rechargeable batteries must be the same type. BT accepts no responsibility for damage caused to your phone by using any other type of batteries.

Important

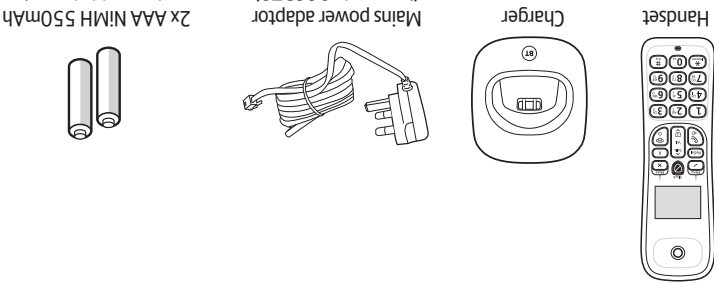

For each additional handset (if you've bought a multipack)

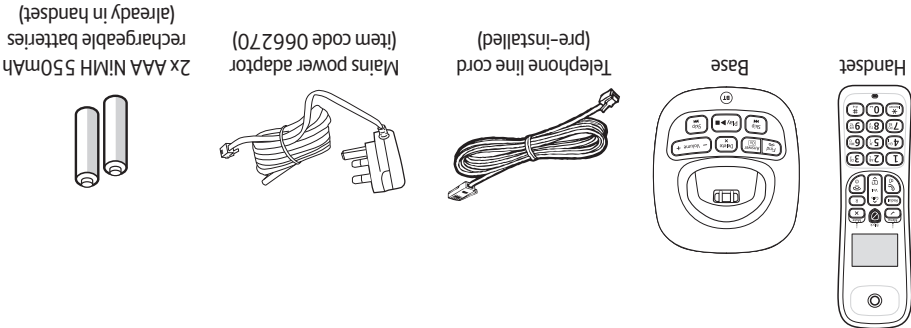

What's in the box

 


BT7660 (K55-E97 TAM) with easy call blocking and answer machine User Guide



You'll need a Caller Display service from your network provider to use Call Blocking and other Caller Display enabled features, including accessing your Calls list. Charges may apply.

1 Plug in

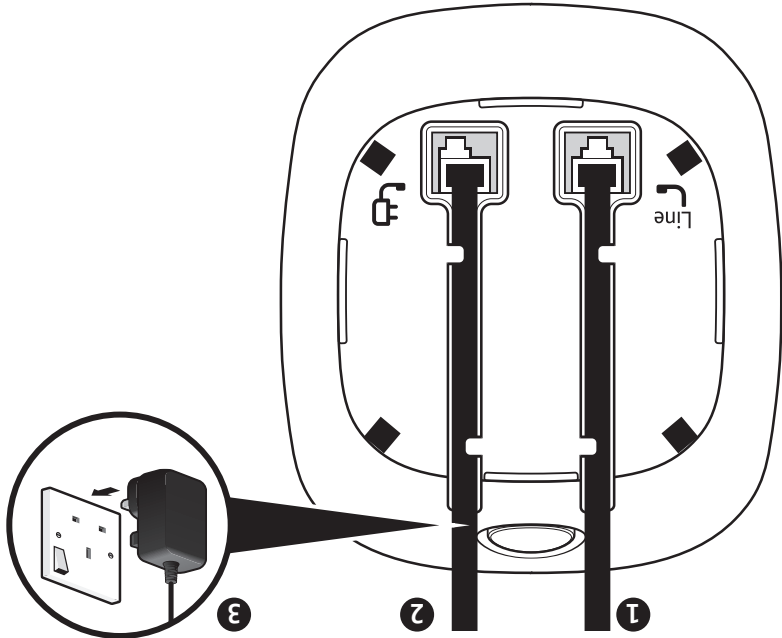

 
- 1 The telephone line cord is already fitted, plug the other end into the wall socket.
- 2 Plug the mains power adaptor into the base, with the cable clipped in the groove provided. Please use power supply unit item code 066270.
- 3 Plug the other end of the power adaptor into the wall power socket and switch on.

2 Charge

- 1 Activate the batteries by pulling the plastic tab away from the bottom of the handset.
- 2 The handset will check for a link with the base station. Once found, follow the prompt to set the date and time.
- 3 Place the handset on the base to charge the batteries for 16 hours.

Important

You should charge the batteries for 16 hours before using the handset for the first time.

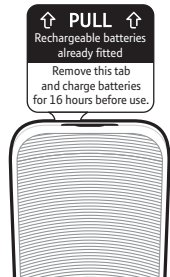

- Set up your additional handsets (if you've bought a multipack)**
- 1 For each additional handset and charger: plug the mains power adaptor into the socket on the underside of the charger, secure the cable behind the retaining clip and plug the other end into the wall power socket and switch on. Please use power supply unit item code 066270.
 - 2 Activate the batteries as shown above. Then place the handset on the charger to charge for 16 hours.

Tip

If you need to remove the batteries, slide open the battery compartment cover and using the finger hole, grip the batteries and gently pull them out.

Your BT7660 is now ready to use.

Other information

Radio transmission information

Frequency range	Max power in the range
1881.792 – 1897.344MHz	≤ 250mW (24 dBm)

EU – Radio Equipment Directive Declaration of Conformity

Hereby, BT declares that the radio equipment type BT7660 (model number K55-E97) is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at: [bt.com/producthelp](https://www.bt.com/producthelp)

UK – Radio Equipment Directive Declaration of Conformity

Hereby, BT declares that the radio equipment type BT7660 (model number K55-E97) is in compliance with Radio Equipment Regulations 2017. The full text of the UK declaration of conformity is available at: [bt.com/producthelp](https://www.bt.com/producthelp)

The BT7660 Single, Twin, Trio and Quad power efficiency information is available at the following internet address: [bt.com/producthelp](https://www.bt.com/producthelp)

Disposing of your old electrical and electronic equipment

The Government has a legal requirement to minimise the unsorted waste disposal of electrical and electronic equipment and to maximise its separate collection and environmentally sound management. The symbol shown here and on a product, means you shouldn't throw it in your normal rubbish at the end of its working life.



This product may contain substances that could be harmful to people or the environment if it's not recycled correctly. Check with your retailer to find out how to recycle your old equipment, or if you've bought something

Available in other formats including braille, large print or audio CD. If you would like a copy, please call 0800 145 6789*.

© British Telecommunications plc 2021. We're registered in England at 81 Newgate Street, London, EC1A 7AJ, UK (company number 18000000).

* Calls to our helpdesk made from the UK mainland and mobile networks are free. International call costs vary.

BT7660 QSG (06/21) Issue 1



Important safety and care instructions.

Keep for future reference.

Your BT7660 is manufactured to comply with European safety standards. Please read the following instructions carefully before installing and using it.

Important

You won't be able to call emergency services from this phone if there's a power cut, so make sure you've got another way to call for help in an emergency. This product is intended for connection to analogue public switched telephone networks and private switchboards in the UK and Republic of Ireland.

Installation and location

- For indoor use only in UK and Ireland
- Position all parts, including power adapters away from heat and sun (e.g. away from radiators, window sill or other electrical equipment which can get hot)
- Keep area ventilated (e.g. don't put in cupboards or back of sofas) and don't block any vents with objects or thick carpets
- Keep device and cables out of young children's reach
- Only use power adapters and rechargeable batteries provided by BT for this specific device; contact our helpdesk if you need a replacement
- Electronic devices hate liquids; don't place devices and power adapters in damp areas or near sources of water or splashes
- Product may cause scratches or marks if placed on fragile surfaces (e.g. veneered wood or delicate fabrics); place on a mat if required
- Don't use near flammable substances or in a flammable atmosphere (e.g. warehouse or garage)
- Designed for use at room temperatures between 0 and 40°C

Care and maintenance

 
- Treat all parts with care; no shock or vibration, and don't pull or twist any cables
- Regularly check your product for damage to ensure small parts aren't exposed
- Dust with a soft dry cloth; don't use water or solvent
- Regularly check that objects don't cover any parts or any vents that could cause overheating
- When not in use, store in a dry place and away from extreme heat or cold

Warnings

- If any parts of your product, power adapters or any cables appear damaged, discontinue use immediately. Switch off your electrical socket if it is safe to do so and contact our helpdesk. See terms in the Guarantee section
- Don't try to open your devices or power adapters. There are no serviceable parts and you risk an electrical shock
- There is a slight chance your phone could be damaged by an electrical storm. We recommend that you unplug the power and phone line cord during an electrical storm
- If you've got a pacemaker please check with your doctor before installation
- Radio signals transmitted between the handset and base may cause interference to hearing aids

Battery safety information

- Only use batteries of same size and type as advised in the set-up section of this guide
- Take care when disposing of your product. The battery could explode if placed in a fire, a hot oven or is crushed or cut
- Don't subject the product to extremely low air pressure as the battery may explode or leak flammable liquid or gas

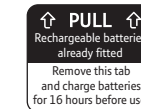

Tip

If you need to remove the batteries, slide open the battery compartment cover and using the finger hole, grip the batteries and gently pull them out.

Your BT7660 is now ready to use.

Please turn over



3 Using your telephone

☆ Important


You'll need Caller Display to get the most from your nuisance call blocker phone and for all the features to work, you'll need to subscribe to a Caller Display service from your network provider. Charges may apply.

Making and receiving calls

Make and end a call

Press green  then dial the phone number. Press red  to end the call.

Answer a call






Lift handset from base or charger. If handset not on base or charger you'll need to press green .

Mute

Press  during a call. Press  to return to your caller.

View or dial a number in Calls list†

The Calls list stores details of the last 50 incoming calls.




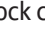 
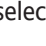 






 
 


- 1 Press , then . Press  or  to scroll through the list.
- 2 Press  to dial the number.

Block nuisance calls†

You need to set Call Blocking up for it to work. Its default setting is **OFF** for all types.

Block calls by type or number

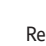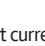






Press , enter your access PIN (default PIN 0000). Press .



 


- i) To block calls by type, select **By Call Type**, press , then scroll  or  to choose each of the call types, press  to select, then scroll to **On** to block calls from selected call type or **Off** using  and  and press .
- ii) To block calls by a specific number, press , enter your access PIN. Press , then scroll  to **Blacklist**, press , scroll  and select **Block number**, press . Scroll  until **Add new** is shown, enter number and press . Numbers entered are saved in the Block List. You can also add numbers from the calls list to the block list.


More details on the Block feature can be found in the full user guide at bt.com/producthelp

Phonebook



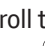

Store entry in phonebook (up to 100)

- 1 Press , then press  again. Scroll  to **New Entry**, press .
- 2 Enter name using keypad and press .
- 3 Enter phone number and press  to save.
- 4 **Add to VIP?** is displayed. Press  if you want to add to your VIP list. **Saved!** is displayed.

 
To save a number to your phonebook from the Calls list, press , then . Scroll to the number and press . **Save Number** is displayed, press . Enter name and press .

Edit the number if required, press  to save.

 
Dial entry in phonebook

- 1 From the home screen, press .
- 2 Scroll  or  to display the entry and press  to dial.

Handset buttons and display icons

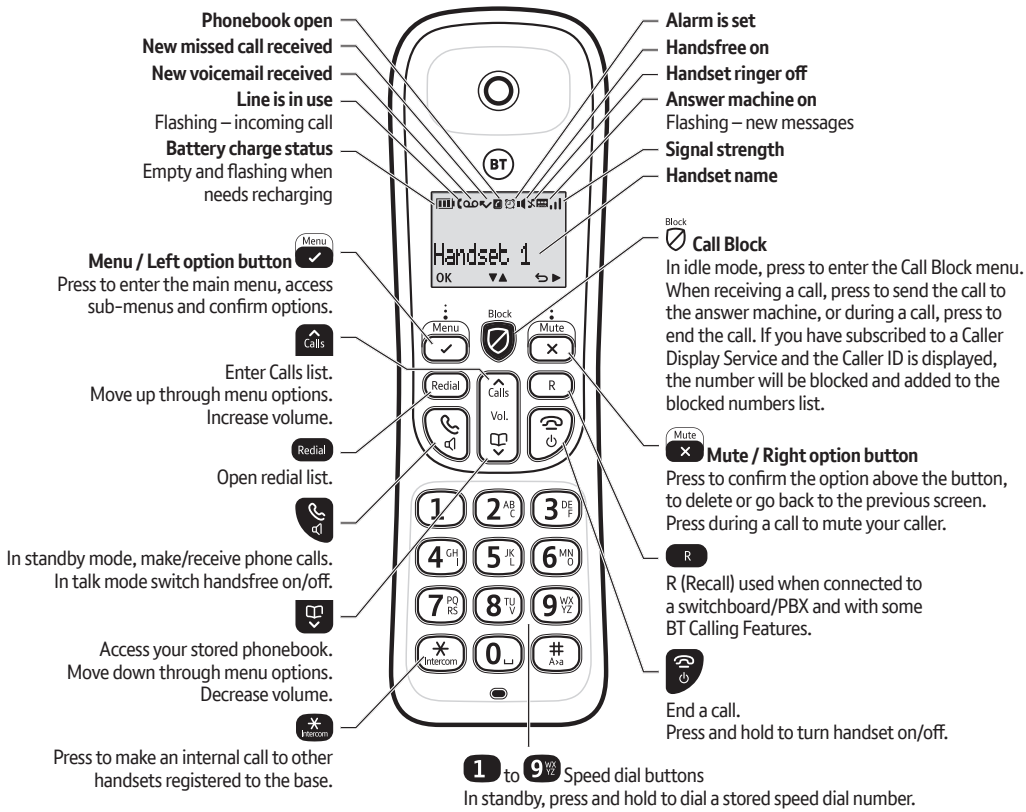


 


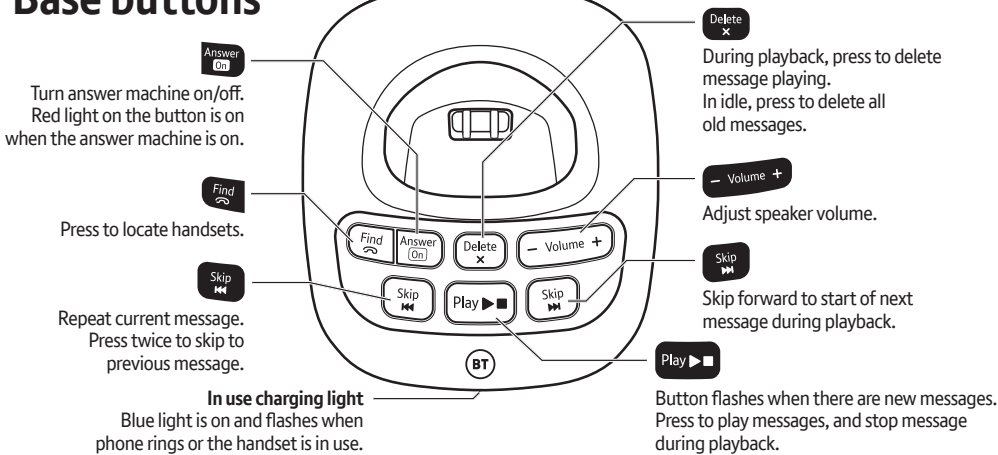




 

 
Base buttons



Answer machine


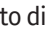 





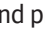 

Your answer machine is on and ready to record messages. You can control it using the buttons on the base (see above) or using the handset **Answ Machine** menu.

Record your own outgoing message









 

- 1 Press . Press  to display **Answ Machine**, press .
- 2 Scroll  to **Answer Mode**, press .
- 3 Scroll  or  to display **Record also** or **Answer only** and press . **Personalized** is displayed, press .
- 4 Scroll  to display **Record** and press . **Recording** is displayed and you'll hear a beep. Speak your message, then press  to end recording.

Set the answer delay

For compatibility with BT1571 or another voicemail service make sure the answer delay is set to answer before the service, e.g. for BT1571 do not set to more than 5 rings.


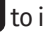 
- 1 Press . Press  to display **Answ Machine**, press .
- 2 Scroll  to **Answ Setting** and press . **Ring delay** is displayed, press .
- 3 Scroll  or  to display the number of rings you want (**0-9**) or **Time saver** and press .

Using the menu

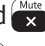





 

- Press  to open the main menu, scroll through using  or . When the menu you want is displayed, press . Press  or  to scroll through the sub menus and press  to select.
-  and  buttons let you select options displayed above the buttons on the display.
- Use  to exit a menu or go back.
- If no buttons are pressed for 30 seconds the handset will return to the idle screen.

Handset volume and sounds





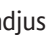


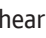 

Incoming speech volume

During a call, press  or  to increase or decrease the volume of your caller's voice.

Handset ringer volume

- 1 Press , scroll  to **Personal Set**, press .
- 2 **Handset Tone** is displayed, press .
- 3 **Ring Volume** is displayed, press .
- 4 Scroll  or  to adjust the volume, press  to save.

Handset ringtone

- 1 Press , scroll  to **Personal Set**, press .
- 2 **Handset Tone** is displayed, press .
- 3 Scroll  to **Ring Melody**, press .
- 4 Press  or  to hear ringtones, press  to save.

Using the keypad

- When entering letters you may need to press the same button a few times until the letter you want is displayed, e.g. press **2^{AB}** once for **A**, twice for **B**, three times for **C**.
- To enter a space, press **0[␣]**.
- To toggle between upper and lowercase characters, press **#^{AB}**.

Need some help?

- Frequently Asked Questions and a full user guide are available online. bt.com/producthelp
- If you cannot find the answer to your question in the full online user guide, call our free Helpline. Our dedicated advisors are more likely to be able to help you than the retailer where you bought your phone **0800 145 6789***

Technical Help & Support

Most problems can be fixed with a few simple checks.

Problem	Solution
No dial tone	Only use the cables supplied. Make sure the telephone line cord is plugged in correctly.
No display	Make sure the batteries are fitted correctly observing the polarity markings.
Using broadband on the same phone line?	To avoid problems with your broadband or noise on your phone line, you might need to plug your telephone line cord into the wall socket via a microfilter (not supplied). If your main phone socket has a single socket, as shown, you'll need to use microfilters. You don't need to use microfilters if your main phone socket has two separate sockets, like either of these:

* Calls to our helpdesk made from the UK mainland and mobile networks are free. International call costs vary.
† Requires a subscription to a Caller Display service from your network provider. Charges may apply.